


For 1-3/4" thick door, fold here and attach to the door at desired height of ASA Strike location. Mark the positions of holes for Face and Edge bores. For other door thickness, mark the holes on door Face side and draw a light line between 2 locators H1/H2. Center the Edge Template on door Edge for marks, using the 'Horizontal Center Line' and H1/H2 line drawn as reference for the Height. If mortise for Strike has already been made in metal frame, position template using strike mortise as reference.

**MORTISE LOCK
INSTALLATION TEMPLATE
RIGHT HAND**

Please read the Template carefully before drilling and mortising the door.

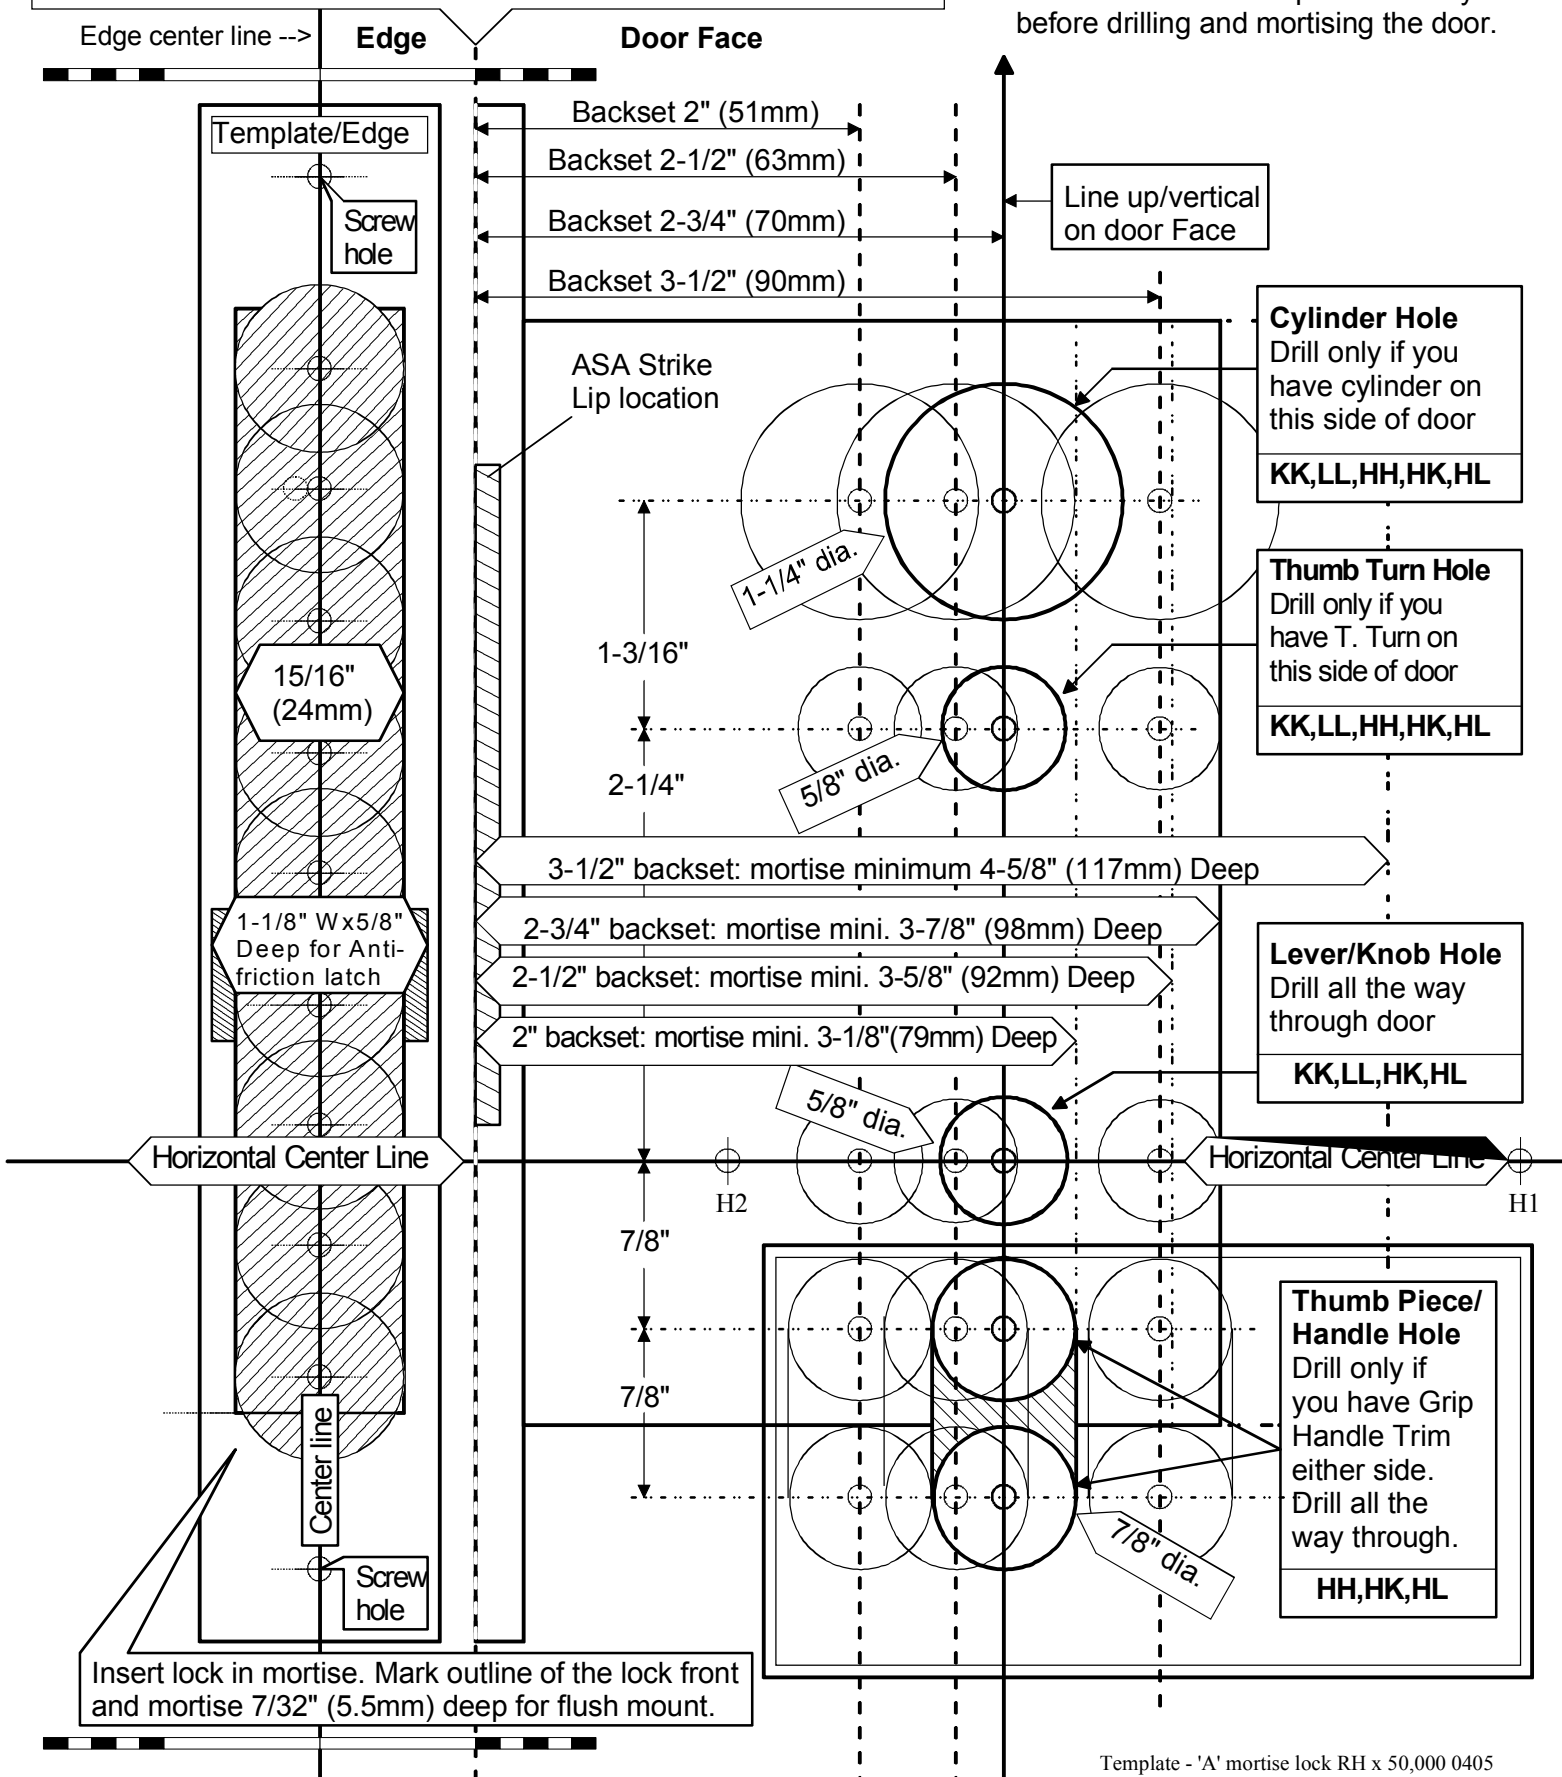

**MORTISE LOCK
INSTALLATION TEMPLATE
LEFT HAND**

Please read the Template carefully before drilling and mortising the door.

For 1-3/4" thick door, fold here and attach to the door at desired height of ASA Strike location. Mark the positions of holes for Face and Edge bores. For other door thickness, mark the holes on door Face side and draw a light line between 2 locators H1/H2. Center the Edge Template on door Edge for marks, using the 'Horizontal Center Line' and H1/H2 line drawn as reference for the Height. If mortise for Strike has already been made in metal frame, position template using strike mortise as reference.

