

DOOR KNOCKER INSTALLATION

Step 1: Determine Position of Door Knocker

Decide how high you want the door knocker to sit on the door. Ideally it should be between eye and shoulder level. Place a strip of masking tape then make a light mark on the door with the pencil at the desired vertical level.

Step 2: Find Horizontal Center Point

With the tape measure or yard stick measure horizontally across the door at the level of the pencil mark on the door. Determine the width of the door. Halve this amount and at the exact center of the door, make a mark. Align this second mark with the first and make an X that represents the center at the right height by placing a second strip of masking tape before making a mark.


Step 3: Position the Door Knocker

Place a level along the screw markings to make sure they are level before drilling.

Step 4: Drill Pilot Holes

With the power drill and a small drill bit, make two pilot holes in the door. They need not be more than 1/2 inch deep. Once pilot holes are drilled check alignment with door knocker, then use larger drill bit for installation screws.

Step 5: Universal Mounting Kit

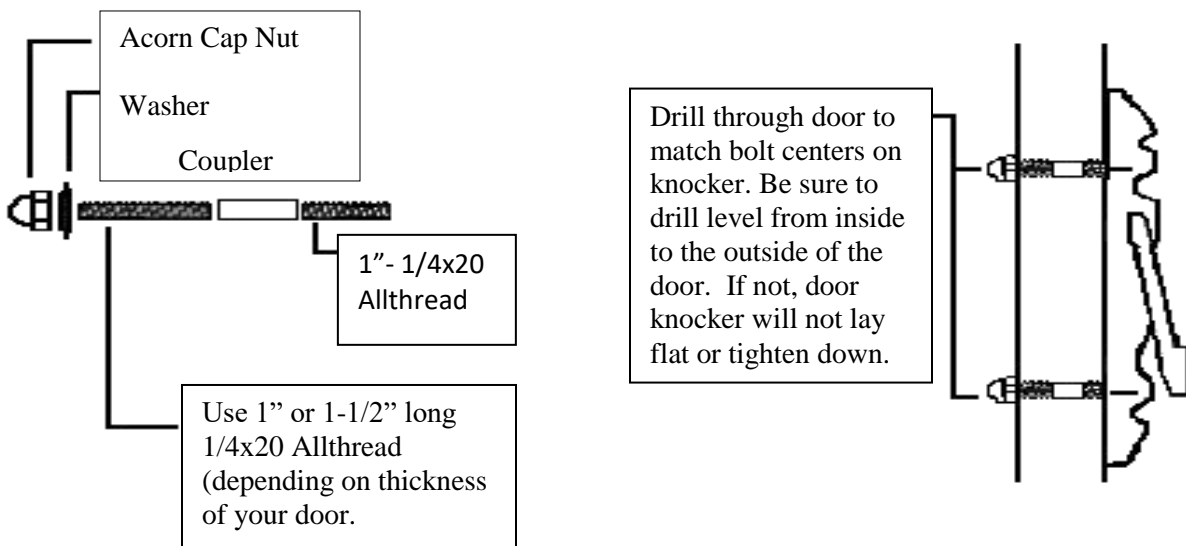

Step 6: Attach the Door Knocker

Erase any visible pencil marks. Place the door knocker in position and insert the first screw a couple of turns. Do the same for the second screw. Making sure the door knocker is level, turn the screws all the way into the door, alternating back and forth until both are tight and the knocker is secured to the door.